




4 Easy Steps!




(1) Collect Specimen



(2) Remove Cap & Collect Specimen with Pipette

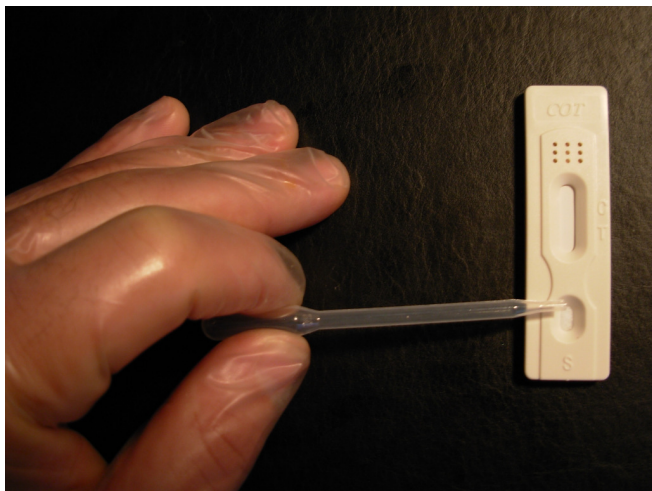

(3) Deposit 3 Drops into Well

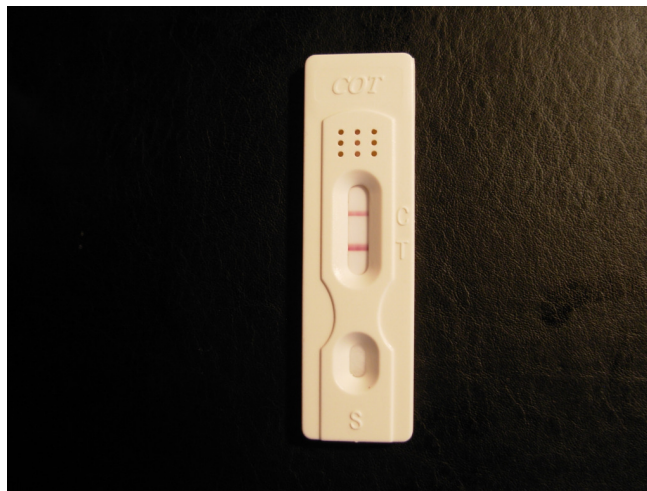

(4) Read Test Lines for Results
(two lines = negative, one line = positive)

Instant Cotinine Screens provide only a qualitative preliminary analytical result. A secondary analytical method must be used to obtain a confirmed result. See package insert for more details.